


---

Title:

RC3600 DATA ENTRY RELEASE 2  
USER'S GUIDE FOR SUPERVISOR PROGRAM DELETE

---

 **REGNECENTRALEN**

RC SYSTEM LIBRARY: FALKONERALLE 1 DK-2000 COPENHAGEN F

---

RCSL No: 43-GL6894  
Edition: MAY 1978  
Author: Per Nielsen

---

Keywords:

MUS, DOMUS, DATA ENTRY, SUPERVISOR PROGRAM, DELETE

---

Abstract:

This manual describes how to use the supervisor program DELETE.

The program deletes a batch, a format, a subprogram, a table, a disc-table, a job of batches, or a supervisor program.

---

Copyright A/S Regnecentralen, 1978  
Printed by A/S Regnecentralen, Copenhagen

Users of this manual are cautioned that the specifications contained herein are subject to change by RC at any time without prior notice. RC is not responsible for typographical or arithmetic errors which may appear in this manual and shall not be responsible for any damages caused by reliance on any of the materials presented.

---

CONTENTS

PAGE

---

1. INTRODUCTION .....	1
2. PROGRAM: DELETE - DELETE JOBS, BATCHES, FORMATS, SUBPROGRAMS, TABLES FROM DISC .....	2

1. INTRODUCTION.

1.

This manual describes how to use the supervisor program DELETE.

For further description of the program see the following pages, page 2, 3 and 4. These three pages (page 31, 32 and 33) can be inserted in the:

RC3600 DATA ENTRY RELEASE 2

USER'S GUIDE PART 2

RCSL: 43-GL4796

EDITION: JUNE 1977

instead of the already existing 3 pages.

The reason for this manual is some changes in the printout produced by the program, and the addition of a new receipt.

2. PROGRAM: DELETE - DELETE JOBS, BATCHES, FORMATS, SUBPROGRAMS, TABLES FROM DISC.

2.

## KEYING:

1. Key: DELETE
2. If a batch is to be deleted  
key: BATCH  
If a job and its batches is to be deleted  
key: JOB  
If a format is to be deleted  
key: FORM  
If a subprogram is to be deleted  
key: SUBPROGRAM  
If a core-table is to be deleted  
key: TABLE  
If a disc-table is to be deleted  
key: DISCTABLE  
If a supervisor program is to be deleted  
key: SUPV
3. Key: The name of the batch, job, format, subprogram, coretable, disctable, or supervisor program to be deleted.
4. If protection is to be released  
key: RELEASE
5. Press the ENTER key.

## DESCRIPTION:

The DELETE program is used to delete jobs and batches no longer needed in the system. Formats, subprograms, and tables can be deleted when (new) versions with the same names are to be introduced by using the programs TRANSLATE and DISCTABLE.

The DELETE SUPV command can besides deleting supervisor programs, also be used for deletion of discfiles which are not in a library. However this must only be performed in special cases and on agreement with REG-NECENTRALEN.

The following messages may occur on a printout:

1. BATCH <batchname> NOT DELETED, STATE ERROR.

The batch is not in a state to be deleted. Use the SURVEY command to check batch status and consult section 11 in part 1 of the Users Guide.

The batch can be released for deletion by using the RELEASE parameter.

2. BATCH <batchname> NOT DELETED, IN USE  
The batch is being used by another keystation.
3. BATCH <batchname> NOT DELETED, NOT BATCH  
The first part of the batch (batch description) is destroyed due to fatal system error.
4. BATCH <batchname>: LIBRARY ERROR  
An entry in a jobname library on disc contains the name of a batch which does not exist as a discfile. The name is removed from the jobname library.
5. JOB <jobname>: LIBRARY ERROR  
An entry in the joblibrary on disc contains the name of a job which does not exist as a discfile.

## EXAMPLES:

- 1) DELETE BATCH B0005
- 2) DELETE JOB J0007
- 3) DELETE JOB J0007 RELEASE
- 4) DELETE FORM FRM2
- 5) DELETE TABLE TAB17
- 6) DELETE SUBPROGRAM S0025
- 7) DELETE DISCTABLE DT1
- 8) DELETE SUPV PRGX

## RECEIPTS:

- |              |  |
|--------------|--|
| NOT NAME     | The specified name is not a discfile.  |
| NOT JOB      | The specified name is not a job.   |
| NOT BATCH    | The specified name is not a batch.   |
| NOT FORMAT   | The specified name is not a format.  |
| NOT SUBPROGR | The specified name is not a subprogram.  |
| NOT TABLE    | The specified name is not a table.   |
| NOT DISCTABL | The specified name is not a disctable.   |
| STATE ERROR  | The batch is not in a state to be deleted.<br>(See part 1 of the Users Guide section 11).<br>The parameter RELEASE will release protection if desired. |
| BATCH IN USE | The batch is being used by another keystation.   |
| JOB IN USE   | The job is being used by another keystation.   |

LIBRARY IN USE The library holding a format, subprogram, table, or disctable to be deleted is presently being used by another keystation. Or the joblibrary holding the names of the jobs is used by another keystation, when access is required to delete a job.

FORMAT IN USE The format to be deleted is presently used by another keystation (in progress to being loaded into memory).

SUBPR IN USE The subprogram to be deleted is presently required by another keystation.

TABLE IN USE The table to be deleted is presently used by another keystation (e.g. the table PASSW containing passwords)

DISCTAB IN USE The disctable to be deleted is presently used by another keystation.

FILE ERROR A DELETE SUPV command tries to remove a library or a discfile mentioned in a library (e.g. a batch or a format)

CF LIST A printout has been produced. Please confer this to check error messages.

OK CF LIST The specified item is deleted and a printout has been produced. Please confer this to check error messages.

LIBRARY ERROR The specified name occurred in the library (e.g. a job or the format library), but not as a discfile (fatal system error). The name is removed from the library.

DISC ERROR <code> Consult appendix 2.

PRINTOUT ERROR <code> Consult section 8.2.