


(9) **RC 3650 Flexible Disc Drive
Controls and Their Functions**

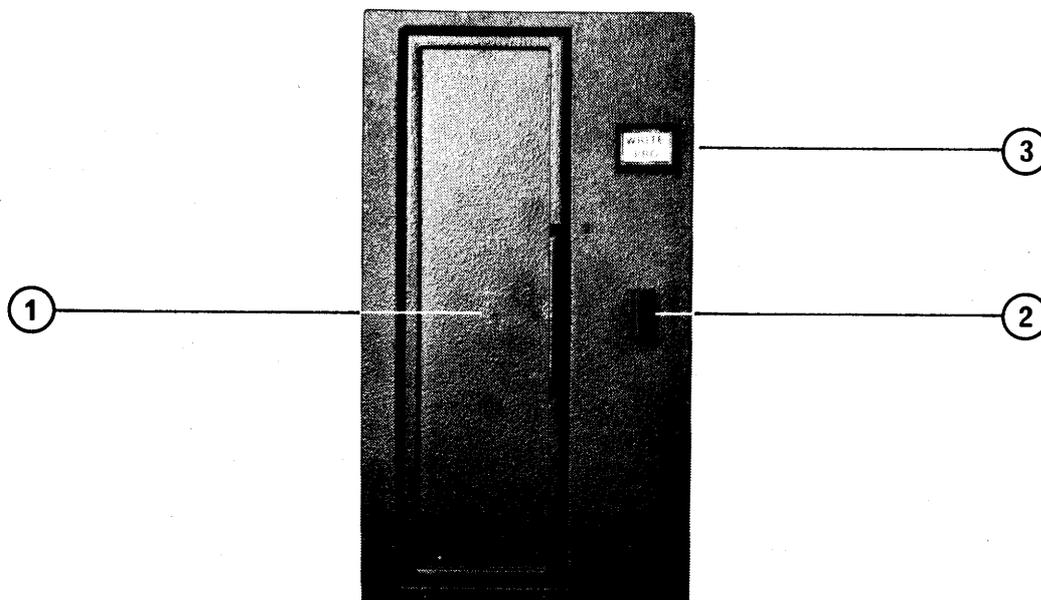

- | | |
|-------------------------------|--|
| 1 Door | |
| 2 Door latch | - when moved to the right the door will spring open. |
| 3 WRITE PROTECT
pushbutton | - when lit no data can be written on the disc, i.e. the disc is in a read only mode. If the pushbutton is pressed the light will go out and both reading and writing functions are possible. |

Note

Power is applied automatically through the POWER key of the F19 Power and Autoload Panel.


How to Find the Correct Flexible Disc

In the top left hand corner of the disc jacket there is an adhesive label. This label contains information about the contents of the disc.


Important: When labelling discs write the necessary information on the label and then transfer the label to the disc jacket. **DO NOT** write on labels attached to the disc jacket - this will damage the disc surface.

How to Load a Flexible Disc

- 1) Open Flexible Disc Drive door using doorlatch (2).
- 2) Remove disc from storage envelope as shown.

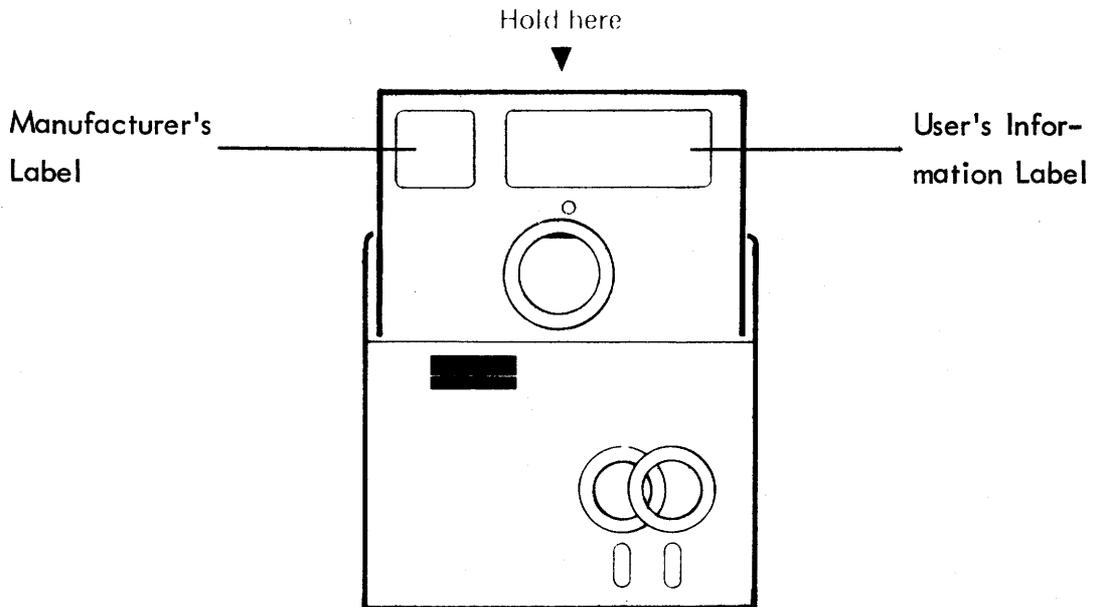

- 3) Carefully slide the disc into the Flexible Disc Drive, as shown, until the jacket is pushed firmly against the stops.

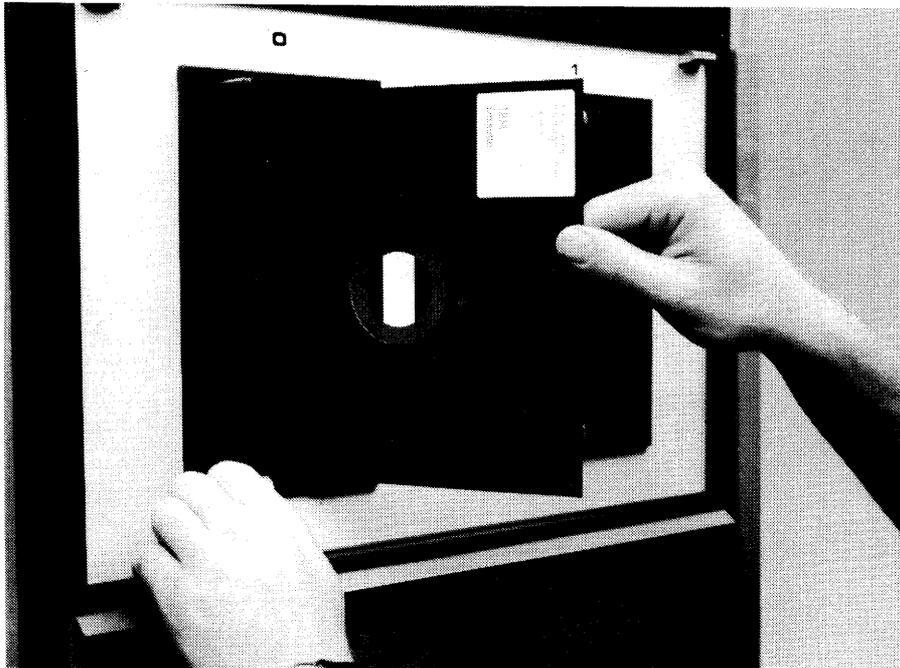

- 4) Carefully close the door and ensure that it is latched.