


(9) **RC 3652 Disc Cartridge Drive
Controls and Their Functions**

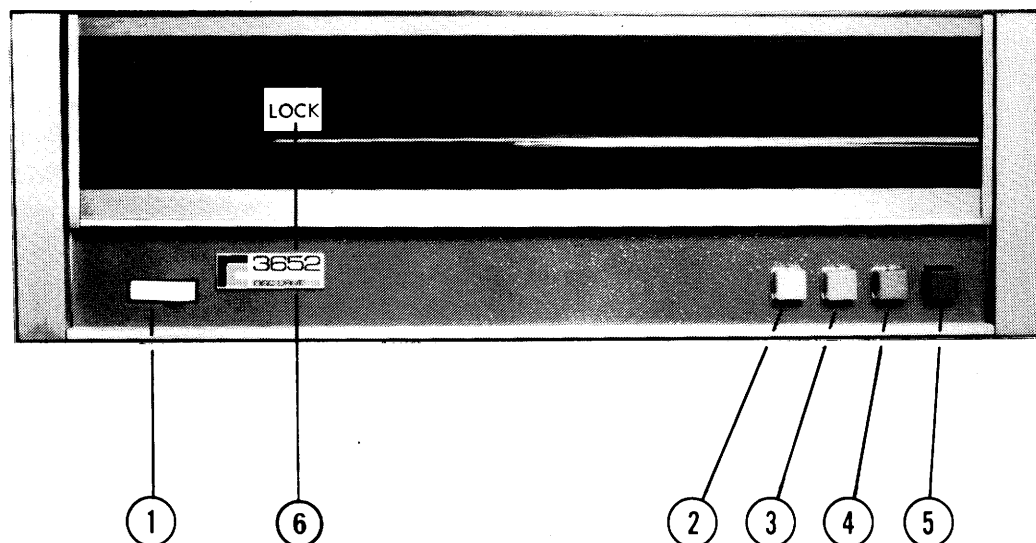

- | | | |
|---|--------------------|--|
| 1 | LOAD/RUN switch | - In the LOAD position and when the white LOAD light (2) is on, the door is unlocked and a cartridge can be inserted or removed (LOADed or unLOADed). With a cartridge loaded, switching to the RUN position will start the disc rotating. |
| 2 | LOAD light | - indicates that a cartridge can be loaded or unloaded. |
| 3 | Yellow READY light | - indicates that the drive is ready to write data on the disc or retrieve data from the disc. |
| 4 | Orange CHECK light | - indicates that a faulty write condition exists and that all writing of data is inhibited. |
| 5 | Red POWER light | - When lit, power is on. With the power off, the door is locked and the interlock flag (6) is visible. |

Note

Power is applied automatically through the POWER key of the F19 Power and Autoload Panel.