

---

Title:

ASSEMBLY GUIDE RC8006S

---

 **REGNECENTRALEN**

RC SYSTEM LIBRARY: FALKONERALLE 1 DK-2000 COPENHAGEN F

---

RCSL No: 30-M 223

Edition: January 1979

Author: Niels Toft.

---

**Keywords:** RC8006S, RC8000-55S (Semiconductor Memory).

---

**Abstract:** This paper contains recommendations for PCB configurations and cable interconnections for the RC8000 part of the system.

---

**Copyright** A/S Regnecentralen, 1978  
**Printed by** A/S Regnecentralen, Copenhagen

Users of this manual are cautioned that the specifications contained herein are subject to change by RC at any time without prior notice. RC is not responsible for typographical or arithmetic errors which may appear in this manual and shall not be responsible for any damages caused by reliance on any of the materials presented.


---

<u>CONTENTS</u>	<u>PAGE</u>
PCB and Chassis Configurations .....	1
Power Cables .....	2
Signal Cables .....	3




## Note:


Priority Lines Plug CBL 824  
in all empty CHS slots.

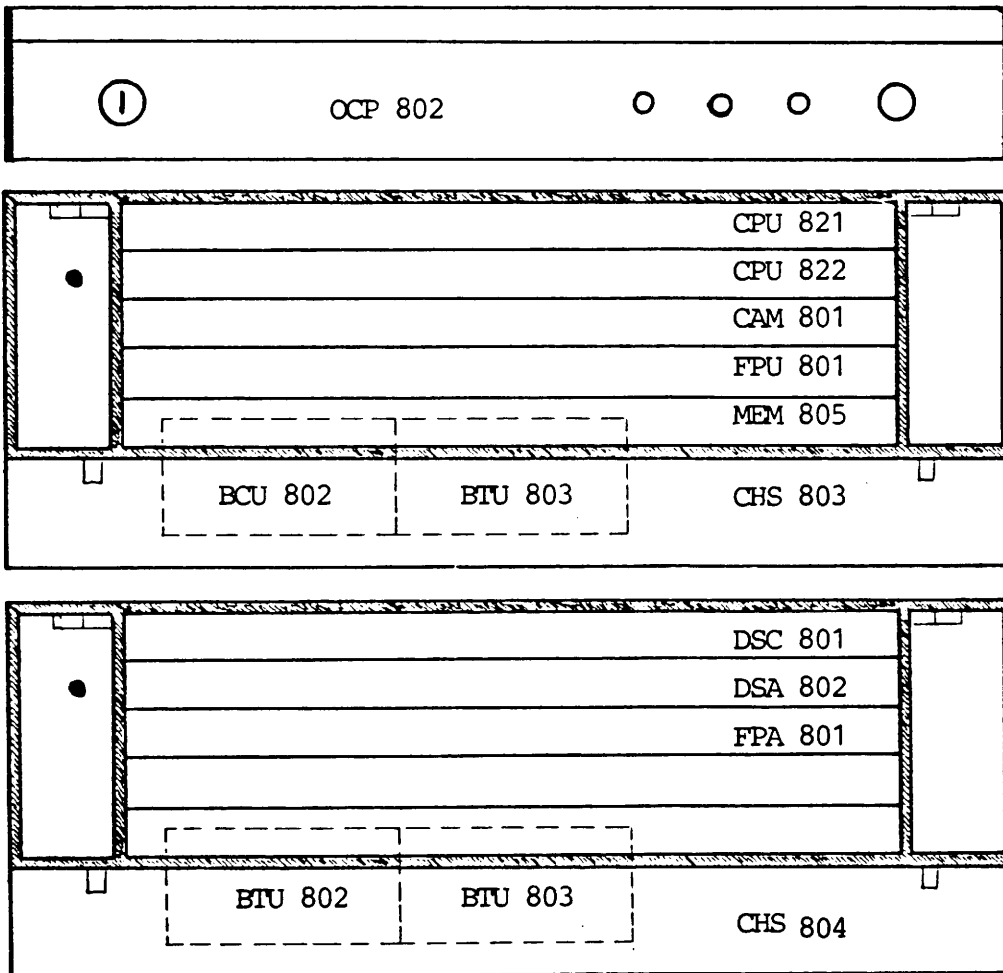

RC8006 S (-55 S)

PCB and Chassis Configurations

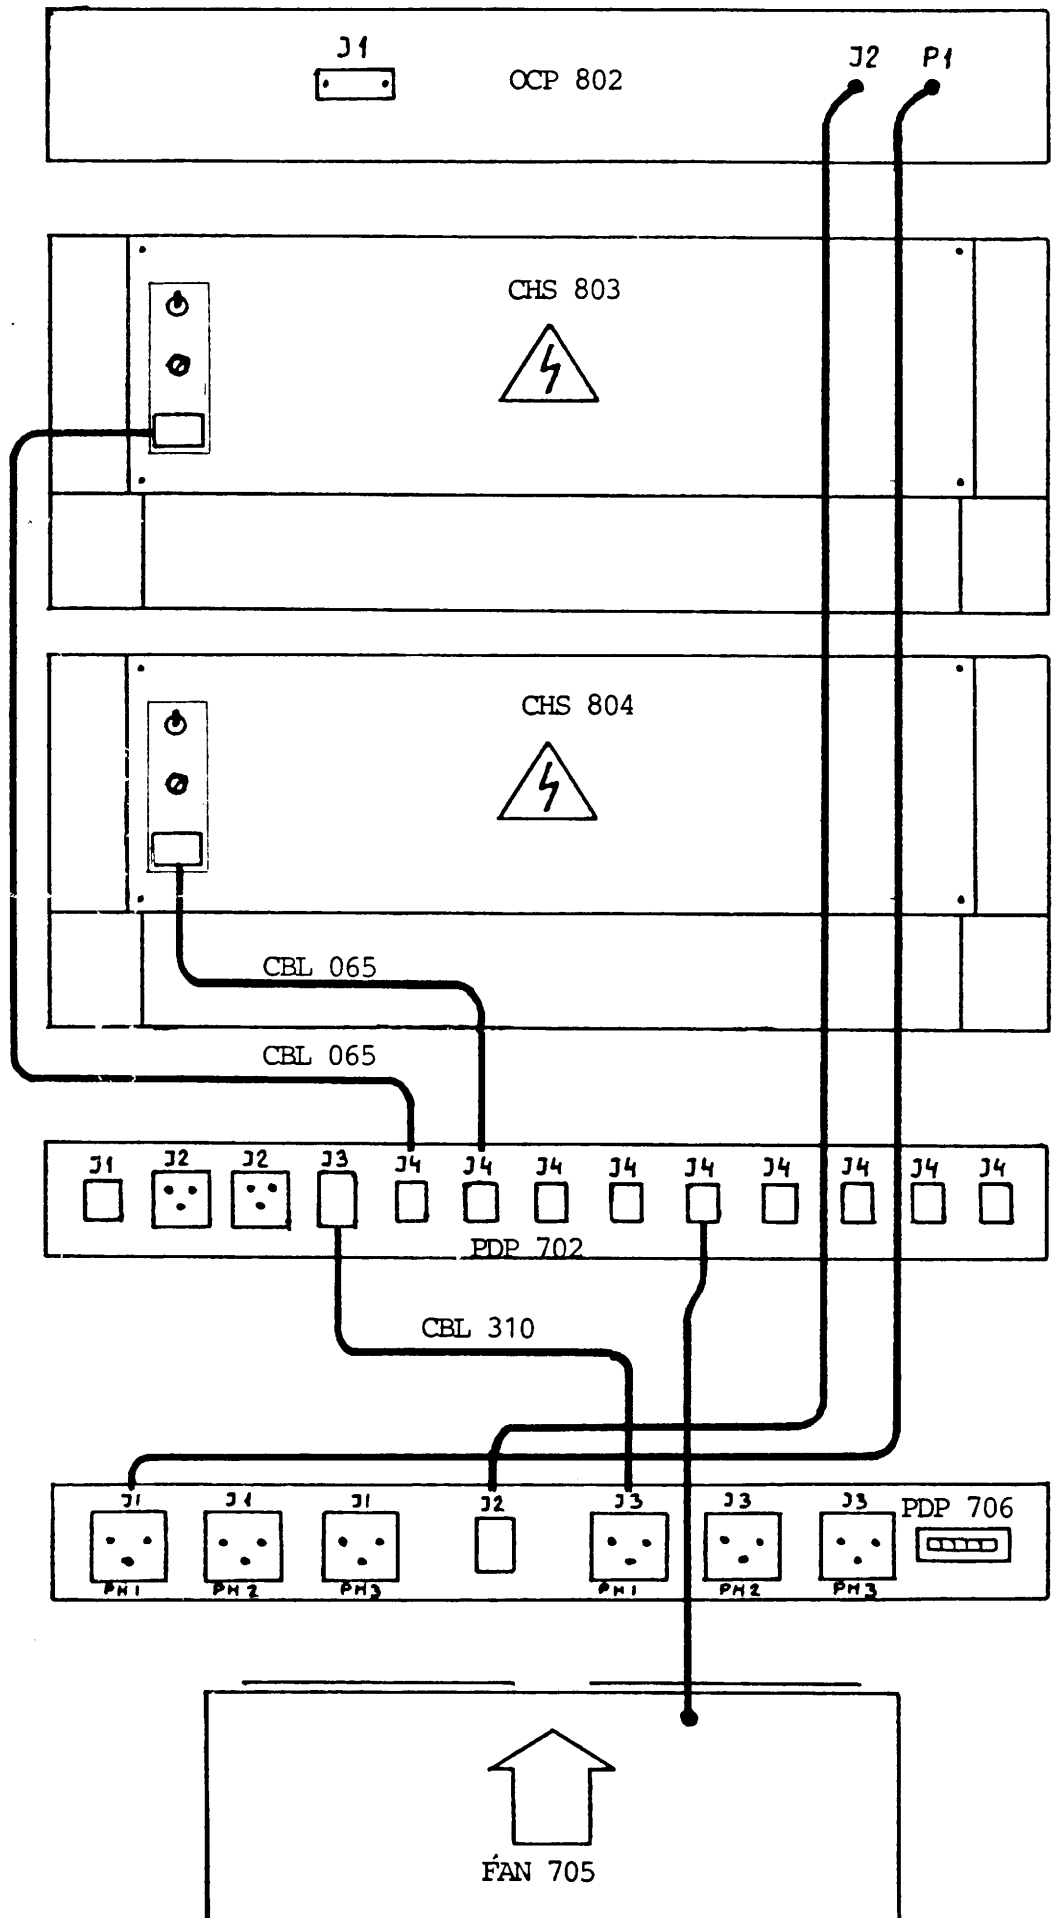

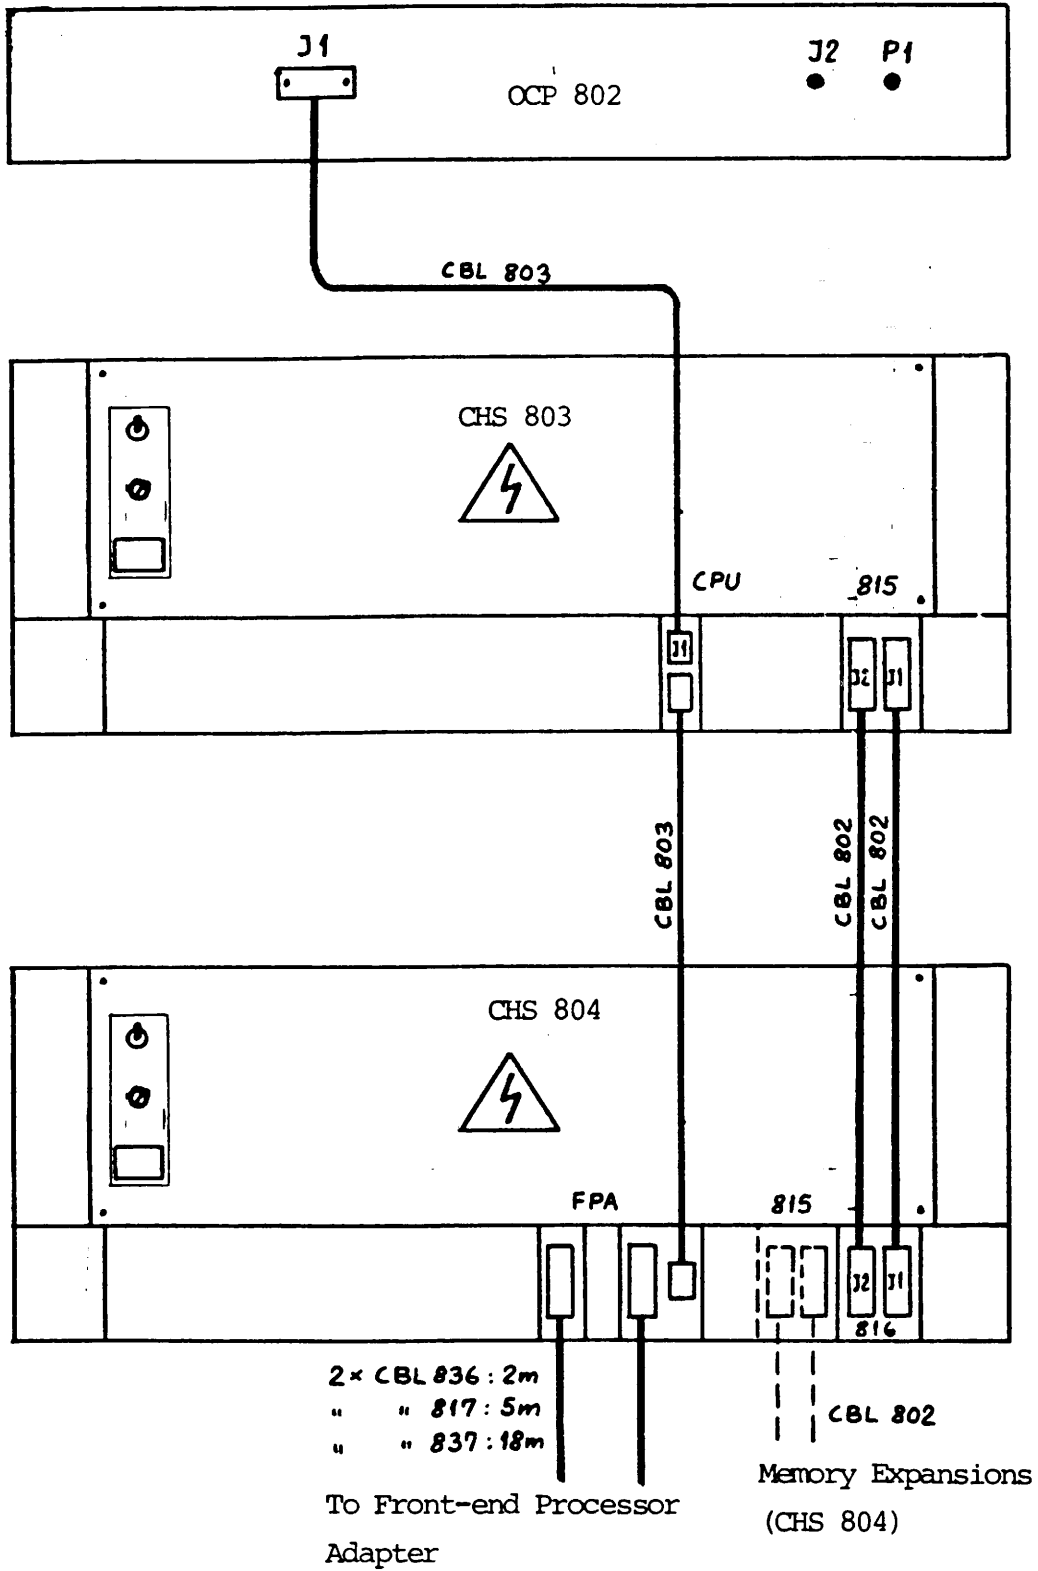

RC8006 S (-55 S)  
Signal Cables

