

---

Title:

Device Reliability Programs, Operating Guide.

---

 **REGNECENTRALEN**

RC SYSTEM LIBRARY: FALKONERALLE 1 DK-2000 COPENHAGEN F

---

RCSL No: 44-RT 1816

Edition: 79 92 01

Author: Ole Sylvest

---

Keywords:

RC 3600, Musil, System Test, Operating Guide

---

Abstract:

This manual makes it possible for an operator on a 3600, 6000, 7000, and 8301 system to run device reliability programs as preventive maintenance and in error situations.

## CONTENTS

1. SHORT INTRODUCTION
2. LOAD OF DEVICE RELIABILITY PROGRAMS
3. INDEX TO TOTAL SET OF PROGRAMS AS CONTAINED  
ON RC 3600 SYSTEM MAINTENANCE MEDIA
4. OPERATING GUIDES TO THE INDIVIDUAL PROGRAMS
5. INDEX TO PROGRAM LISTINGS

## 1. SHORT INTRODUCTION

The Device Reliability Programs operate in a specific environment.

SIZE First of all the size (bytes) must be taken into consideration. The exact program size is stated on the first page of program listing.

Loading the programs in empty 64 KBytes CPU's (RC 6000, RC 3701, RC 8301) cause no problems.

The size problem will only be actual in smaller RC 3600 configurations, or when running many Device Reliability Programs simultaneously.

DRIVERS Testing a specific device, the driver to this device must be present (refer to index, 3).

TIME Keeping track on the test time, makes it necessary always to load the program - TIME, before test running.

PRINTERS The Device Reliability Program testing printers, often needs a conversion table in order to adapt the program to the specific character set on the printer (refer to index, 3). If no tabel is specified, the mode is ASCII.

## 2. LOAD OF DEVICE RELIABILITY PROGRAMS

Perform the normal autoloading procedure on the data medium:

### RC 3600 SYSTEM MAINTENANCE

Refer to previous chapter concerning load of system maintenance or directly to OPERATING GUIDE.

If only paper tape or punched cards are present, autoloading the basic system (BTP or BTC).

If the autoloading ends with:

> S you are already in contact with the operative system.

If not, type:

CTRL	+	G	S	RETURN
------	---	---	---	--------

  
simultaneously

to get in contact.

The rest of load procedure, go to OPERATING GUIDE FOR THE INDIVIDUAL PROGRAMS.

## 3. INDEX TO TOTAL SET OF PROGRAMS AS CONTAINED ON RC 3600 SYSTEM MAINTENANCE MEDIA

Note: The number of Device Reliability Programs will be steadily increased until the full range of devices are covered.

RC3600 MUS PROGRAM TAPE	:	RC3600 SYSTEM MAINTANCE FT9
DENSITY	:	800 / 1600 BPI
CUSTOMERNAME	:	A/S REGNECENTRALEN
COUNTRY, TOWN	:	GLOSTRUP DENMARK
CREATION DATE	:	79.02.01
CREATED BY	:	HBO
REPLACING	:	

REVISION 78120 HBO

800 BPI: 44-RT 1815  
1600 BPI: 44-RT 1820

FILE 001 AUTOLOAD BTMD9 RCSL:43-GL 4326

FILE 002 \* 0 CLEAR  
LOAD OCP MT80  
END

FILE 003	OCP	OP003	RCSL: 43-GL1155
FILE 004	MT80	REL.BIN	RCSL:43-GL 5875
FILE 005	TIME	TIME	RCSL: 43-GL4925
FILE 006	CPT	CP003	RCSL: 43-GL4324
FILE 007	CPT1	CP102	RCSL: 43-GL3478
FILE 008	CDR	CR003	RCSL: 43-GL4012
FILE 009	FD0	FD204	RCSL: 43-GL2853
FILE 010	FD1	FD302	RCSL: 43-GL2453
FILE 011	LPT	LP013	RCSL: 43-GL7093
FILE 012	LPT1	LP104	RCSL: 43-GL3765
FILE 013	MD0	MD000	
FILE 014	MD002	MD002	
FILE 015	HDR00	HDR00	RCSL:43-GL 7722
FILE 016	HDR01	HDR01	RCSL:43-GL 7723
FILE 017	DG000	DG000	RCSL:43-GL 6437
FILE 018	MT0	MT006	RCSL: 43-GL3159
FILE 019	MT1	MT102	RCSL: 43-GL2603
FILE 020	MT2	MT201	RCSL: 43-GL2650
FILE 021	MT3	MT301	RCSL: 43-GL2653
FILE 022	MT4	MT403	RCSL: 43-GL2565
FILE 023	MT5	MT502	RCSL: 43-GL2606
FILE 024	PTR	PR006	RCSL: 43-GL2400
FILE 025	PTR1	PR100	RCSL: 43-GL1240
FILE 026	PTP	PP002	RCSL: 43-GL2604
FILE 027	PTP1	PP100	RCSL: 43-GL1243
FILE 028	CT	CT009	RCSL: 43-GL3670
FILE 029	CT1	CT109	RCSL: 43-GL4164
FILE 030	SP	SP003	RCSL: 43-GL4896
FILE 031	R40R		RCSL: 43-GL 1747
FILE 032	R40X		RCSL: 43-GL 2976
FILE 033	R4MR		RCSL: 43-GL 2269
FILE 034	R4MX		RCSL: 43-GL 2266
FILE 035	SP1	SP101	RCSL: 43-GL4065
FILE 036	SP2	SP201	RCSL: 43-GL4066
FILE 037	TAB1	RC36-00222.02	RCSL: 43-GL2948
FILE 038	TAB2	RC36-00218.03	RCSL: 43-GL2937
FILE 039	TAB3	RC36-00219.00	RCSL: 43-GL2113

FILE 040	TAB4	RC36-00220.00	RCSL: 43-GL2116
FILE 041	TAB5	RC36-00400.00	RCSL: 43-GL3586
FILE 042	P164	RC36-00164.03	RCSL: 43-GL3947
FILE 043	P197	RC36-00197.02	RCSL: 43-GL3953
FILE 044	P202	RC36-00202.01	RCSL: 43-GL4042
FILE 045	P240	RC36-00240.02	RCSL: 43-GL 4113
FILE 046	P269	RC36-00269.02	RCSL: 43-GL6230
FILE 047	P444	RC36-00444.00	RCSL: 43-GL4009
FILE 048	P464	RC36-00464.01	RCSL: 43-GL6109
FILE 049	P569	RC36-00569.00	RCSL: 43-GL4743
FILE 050	P822	RC36-00822.00	43-GL 6546
FILE 051	P690	RC36-00690.00	RCSL: 43-GL 5390
FILE 052	P832	RC36-00832.00	RCSL: 43-GL 6617
FILE 053	P924	RC36-00924.00	RCSL: 43-GL 7310
FILE 054	P1007	RC36-01007.00	RCSL: 43-GL 7718

The following pages present the first, general pages of the reliability program listing.

These pages form an operating guide to the program

**LOAD**

After autoloading of

**RC 3600 SYSTEM MAINTENANCE**

Tape/Disc, or while running RC 3600 MUS/DOMUS software (only for RC 3600 systems), this device reliability program can be loaded and executed the following way:

After contact with operative system = S  
(refer to previous chapters or the system  
operating guide) type:

LOAD TIME < 1 > < 2 > P164

**RETURN**

1: LPT = Line Printer	2: Empty = ASCII
CPT = Charaband Printer	TAB1 = ASCII
CPT1 = Charaband Printer second	TAB2 = RC Standard
SP = Serial Printer	TAB3 = PL 1
SP1 = Serial Printer second	TAB4 = Hungarian
SP2 = Serial Printer third	TAB5 = Cyrillic
	P690 = Czech



TAB1	RC36-00222.02	ASCII conversion table.
TAB2	RC36-00218.03	RC standard -"-
TAB3	RC36-00219.00	PLI -"-
TAB4	RC36-00220.00	Hungarian -"-
TAB5	RC36-00400.00	Cyrillic -"-
P690	RC36-00690.00	Czech -"-
P164	RC36-00164.03	Printer
P197	RC36-00197.02	Card Reader
P202	RC36-00202.01	Flexible Disc (RC3650)
P240	RC36-00240.02	Sync. Line
P269	RC36-00269.02	Magnetic Tape
P444	RC36-00444.00	Cassette Tape
P464	RC36-00464.01	Paper Tape Reader
P569	RC36-00569.00	Paper Tape Punch
P822	RC36-00822.00	Disc (via catalog)
P832	RC36-00832.00	Digital Cartridge
P924	RC36-00924.00	Mark-Sense Card Reader
P1007	RC36-01007.00	HDLC-line