
Title:

ASSEMBLY GUIDE RC8002.



A REGNECENTRALEN

RC SYSTEM LIBRARY: FALKONERALLE 1 DK-2000 COPENHAGEN F

RCSL No: 30-M 184

Edition: January 1979

Author: Niels Toft

Keywords: RC8002, RC8000-15 (Semiconductor Memory).

Abstract: This paper contains recommendations for PCB configurations and cable interconnections for the RC8000 part of the system.


Copyright A/S Regnecentralen, 1978
Printed by A/S Regnecentralen, Copenhagen

Users of this manual are cautioned that the specifications contained herein are subject to change by RC at any time without prior notice. RC is not responsible for typographical or arithmetic errors which may appear in this manual and shall not be responsible for any damages caused by reliance on any of the materials presented.

<u>CONTENTS</u>	<u>PAGE</u>
PCB and Chassis Configurations	1
Power Cables	2
Signal Cables	3


Note:

Priority Lines Plug CBL 824
in all empty CHS slots.

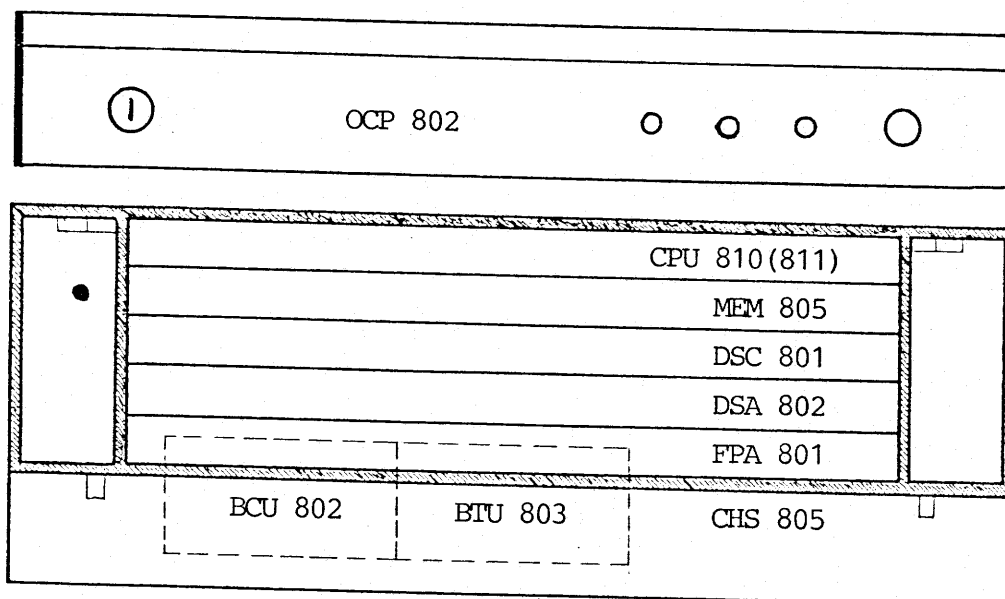


RC8002 (-15)

PCB and Chassis Configurations

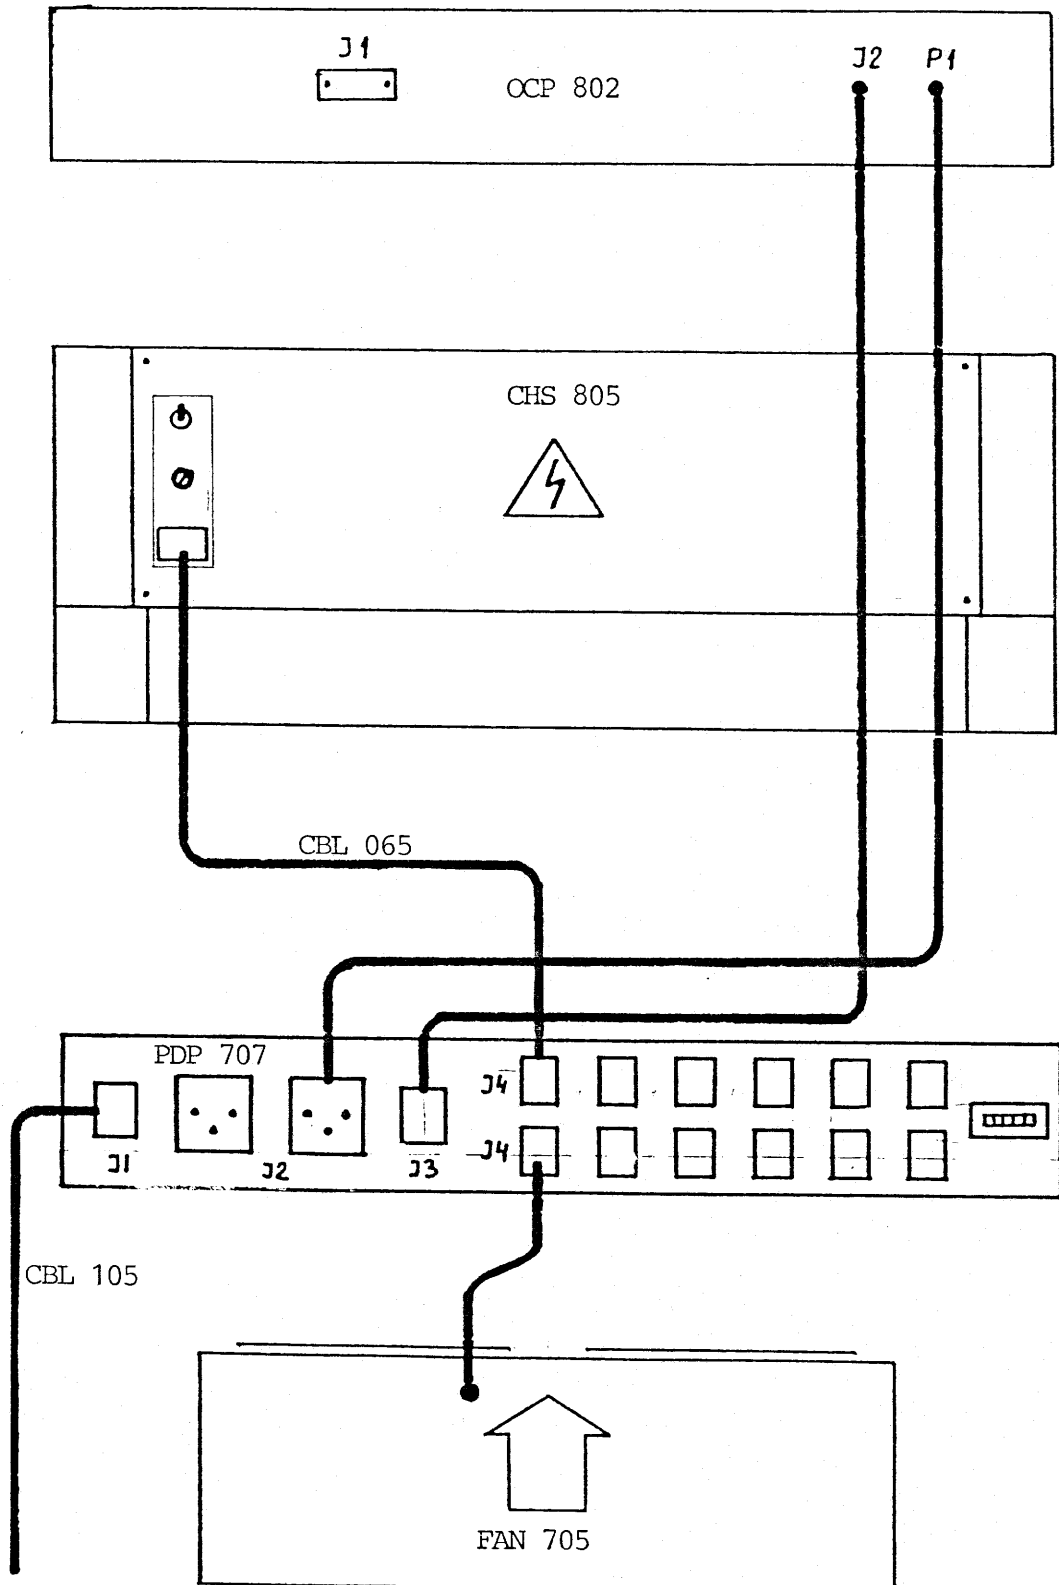

RC8002 Power Cables

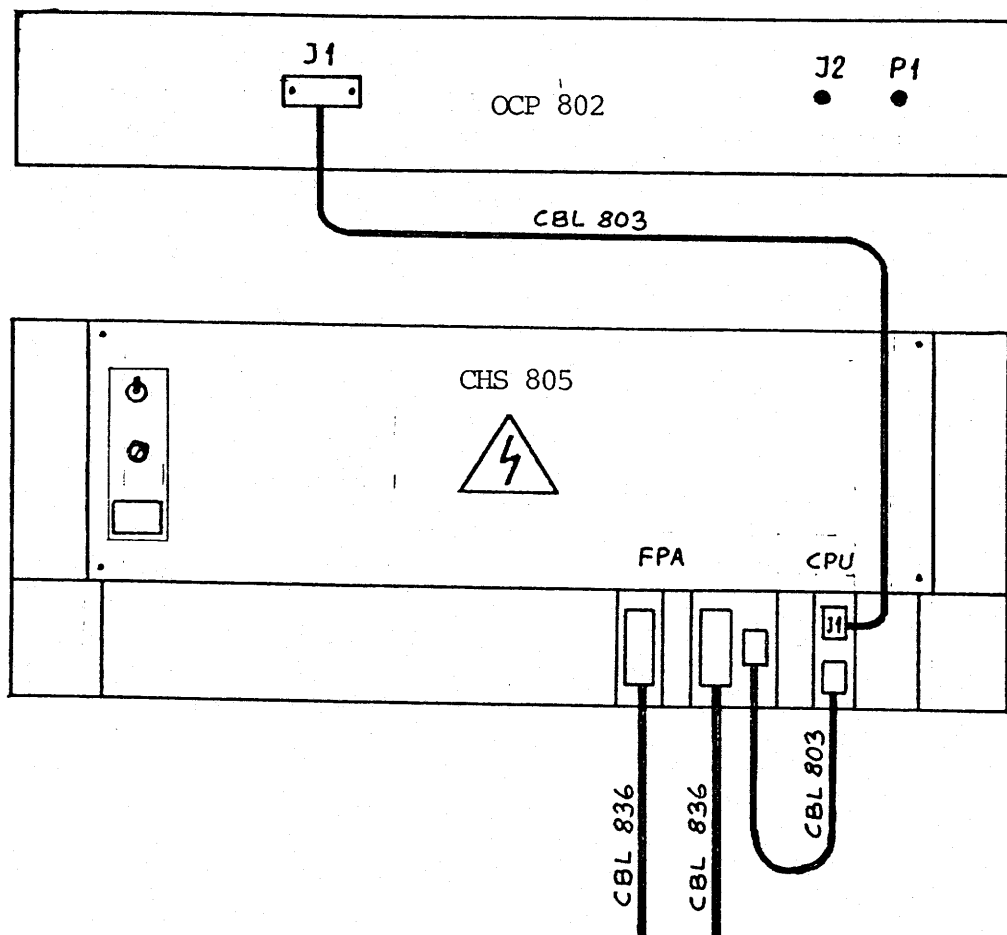

To Front-end Processor
Adapter

RC8002 (-15)
Signal Cables

